

AV-Sync DIP-Switch settings

The DIP-switches are used to set up the IDentifier code that the AV-Sync Box transmits. For regular AV-Sync the IDentifier code ranges from A0:01 to A0:7F.

You can choose a code and set the DIP-Switches on the AV-Sync Box (or vice versa). The code is added as a Trigger in the TourEditor. **For a full list of codes see below:**

Code	DIP-Switch settings (1)						
	1	2	3	4	5	6	7
A001	↑	↓	↓	↓	↓	↓	↓
A002	↓	↑	↓	↓	↓	↓	↓
A003	↑	↑	↓	↓	↓	↓	↓
A004	↓	↓	↑	↓	↓	↓	↓
A005	↑	↓	↑	↓	↓	↓	↓
A006	↓	↑	↑	↓	↓	↓	↓
A007	↑	↑	↑	↓	↓	↓	↓
A008	↓	↓	↓	↑	↓	↓	↓
A009	↑	↓	↓	↑	↓	↓	↓
A00A	↓	↑	↓	↑	↓	↓	↓
A00B	↑	↑	↓	↑	↓	↓	↓
A00C	↓	↓	↑	↑	↓	↓	↓
A00D	↑	↓	↑	↑	↓	↓	↓
A00E	↓	↑	↑	↑	↓	↓	↓
A00F	↑	↑	↑	↑	↓	↓	↓
A010	↓	↓	↓	↓	↑	↓	↓
A011	↑	↓	↓	↓	↑	↓	↓
A012	↓	↑	↓	↓	↑	↓	↓
A013	↑	↑	↓	↓	↑	↓	↓
A014	↓	↓	↑	↓	↑	↓	↓
A015	↑	↓	↑	↓	↑	↓	↓
A016	↓	↑	↑	↓	↑	↓	↓
A017	↑	↑	↑	↓	↑	↓	↓
A018	↓	↓	↓	↑	↑	↓	↓
A019	↑	↓	↓	↑	↑	↓	↓
A01A	↓	↑	↓	↑	↑	↓	↓
A01B	↑	↑	↓	↑	↑	↓	↓
A01C	↓	↓	↑	↑	↑	↓	↓
A01D	↑	↓	↑	↑	↑	↓	↓
A01E	↓	↑	↑	↑	↑	↓	↓
A01F	↑	↑	↑	↑	↑	↓	↓
A020	↓	↓	↓	↓	↓	↑	↓
A021	↑	↓	↓	↓	↓	↑	↓
A022	↓	↑	↓	↓	↓	↑	↓
A023	↑	↑	↓	↓	↓	↑	↓
A024	↓	↓	↑	↓	↓	↑	↓
A025	↑	↓	↑	↓	↓	↑	↓
A026	↓	↑	↑	↓	↓	↑	↓
A027	↑	↑	↑	↓	↓	↑	↓
A028	↓	↓	↓	↑	↓	↑	↓
A029	↑	↓	↓	↑	↓	↑	↓

Code	DIP-Switch settings (2)						
	1	2	3	4	5	6	7
A02A	↓	↑	↓	↑	↓	↑	↓
A02B	↑	↑	↓	↑	↓	↑	↓
A02C	↓	↓	↑	↑	↓	↑	↓
A02D	↑	↓	↑	↑	↓	↑	↓
A02E	↓	↑	↑	↑	↓	↑	↓
A02F	↑	↑	↑	↑	↓	↑	↓
A030	↓	↓	↓	↓	↑	↑	↓
A031	↑	↓	↓	↓	↑	↑	↓
A032	↓	↑	↓	↓	↑	↑	↓
A033	↑	↑	↓	↓	↑	↑	↓
A034	↓	↓	↑	↓	↑	↑	↓
A035	↑	↓	↑	↓	↑	↑	↓
A036	↓	↑	↑	↓	↑	↑	↓
A037	↑	↑	↑	↓	↑	↑	↓
A038	↓	↓	↓	↑	↑	↑	↓
A039	↑	↓	↓	↑	↑	↑	↓
A03A	↓	↑	↓	↑	↑	↑	↓
A03B	↑	↑	↓	↑	↑	↑	↓
A03C	↓	↓	↑	↑	↑	↑	↓
A03D	↑	↓	↑	↑	↑	↑	↓
A03E	↓	↑	↑	↑	↑	↑	↓
A03F	↑	↑	↑	↑	↑	↑	↓
A040	↓	↓	↓	↓	↓	↓	↑
A041	↑	↓	↓	↓	↓	↓	↑
A042	↓	↑	↓	↓	↓	↓	↑
A043	↑	↑	↓	↓	↓	↓	↑
A044	↓	↓	↑	↓	↓	↓	↑
A045	↑	↓	↑	↓	↓	↓	↑
A046	↓	↑	↑	↓	↓	↓	↑
A047	↑	↑	↑	↓	↓	↓	↑
A048	↓	↓	↓	↑	↓	↓	↑
A049	↑	↓	↓	↑	↓	↓	↑
A04A	↓	↑	↓	↑	↓	↓	↑
A04B	↑	↑	↓	↑	↓	↓	↑
A04C	↓	↓	↑	↑	↓	↓	↑
A04D	↑	↓	↑	↑	↓	↓	↑
A04E	↓	↑	↑	↑	↓	↓	↑
A04F	↑	↑	↑	↑	↓	↓	↑
A050	↓	↓	↓	↓	↑	↓	↑
A051	↑	↓	↓	↓	↑	↓	↑
A052	↓	↑	↓	↓	↑	↓	↑

AV-Sync Dip-switch settings (3) and flexible mode, next page

AV-Sync DIP-Switch settings

For AV-Sync in flexible mode, the IDentifier code ranges from A1:00 to A1:FF and are defined by the AV-Sync track that is in the video.

For flexible mode all DIP-Switches should be ON (up).

You can ask our helpdesk for more information.

Code	DIP-Switch settings (3)						
	1	2	3	4	5	6	7
A053	↑	↑	↓	↓	↑	↓	↑
A054	↓	↓	↑	↓	↑	↓	↑
A055	↑	↓	↑	↓	↑	↓	↑
A056	↓	↑	↑	↓	↑	↓	↑
A057	↑	↑	↑	↓	↑	↓	↑
A058	↓	↓	↓	↑	↑	↓	↑
A059	↑	↓	↓	↑	↑	↓	↑
A05A	↓	↑	↓	↑	↑	↓	↑
A05B	↑	↑	↓	↑	↑	↓	↑
A05C	↓	↓	↑	↑	↑	↓	↑
A05D	↑	↓	↑	↑	↑	↓	↑
A05E	↓	↑	↑	↑	↑	↓	↑
A05F	↑	↑	↑	↑	↑	↓	↑
A060	↓	↓	↓	↓	↓	↑	↑
A061	↑	↓	↓	↓	↓	↑	↑
A062	↓	↑	↓	↓	↓	↑	↑
A063	↑	↑	↓	↓	↓	↑	↑
A064	↓	↓	↑	↓	↓	↑	↑
A065	↑	↓	↑	↓	↓	↑	↑
A066	↓	↑	↑	↓	↓	↑	↑
A067	↑	↑	↑	↓	↓	↑	↑
A068	↓	↓	↓	↑	↓	↑	↑
A069	↑	↓	↓	↑	↓	↑	↑
A06A	↓	↑	↓	↑	↓	↑	↑
A06B	↑	↑	↓	↑	↓	↑	↑
A06C	↓	↓	↑	↑	↓	↑	↑
A06D	↑	↓	↑	↑	↓	↑	↑
A06E	↓	↑	↑	↑	↓	↑	↑
A06F	↑	↑	↑	↑	↓	↑	↑
A070	↓	↓	↓	↓	↑	↑	↑
A071	↑	↓	↓	↓	↑	↑	↑
A072	↓	↑	↓	↓	↑	↑	↑
A073	↑	↑	↓	↓	↑	↑	↑
A074	↓	↓	↑	↓	↑	↑	↑
A075	↑	↓	↑	↓	↑	↑	↑
A076	↓	↑	↑	↓	↑	↑	↑
A077	↑	↑	↑	↓	↑	↑	↑
A078	↓	↓	↓	↑	↑	↑	↑
A079	↑	↓	↓	↑	↑	↑	↑
A07A	↓	↑	↓	↑	↑	↑	↑
A07B	↑	↑	↓	↑	↑	↑	↑
A07C	↓	↓	↑	↑	↑	↑	↑
A07D	↑	↓	↑	↑	↑	↑	↑
A07E	↓	↑	↑	↑	↑	↑	↑

Code	DIP-Switch settings flexible mode						
	1	2	3	4	5	6	7
Flex	↑	↑	↑	↑	↑	↑	↑